


SLATE SWITCH

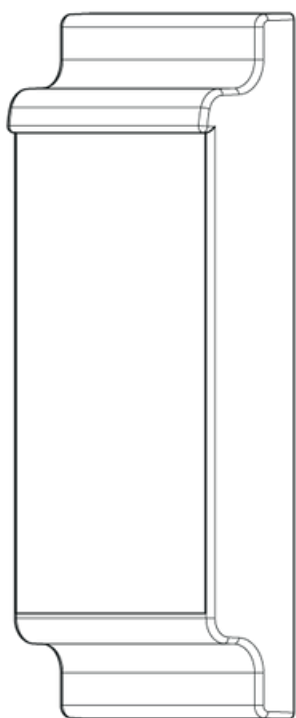


User Manual


A : Battery Installation




Flip Slate switch

Remove
Battery
Cover

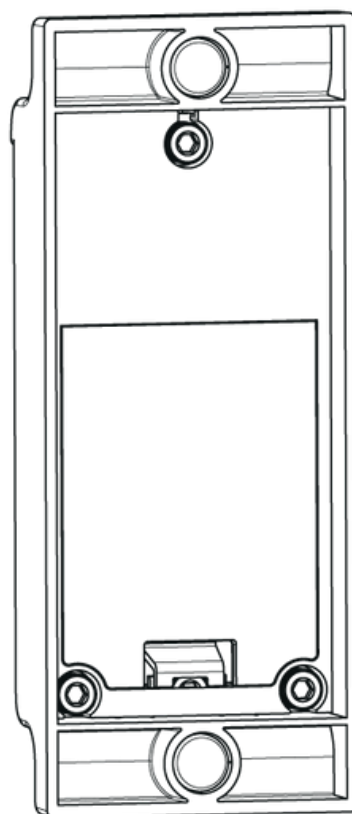

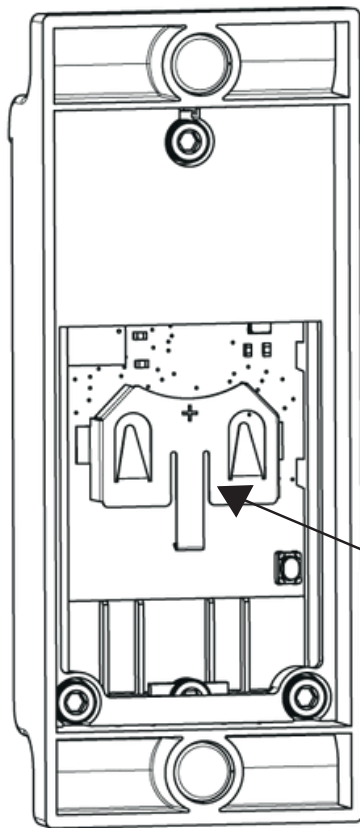


+

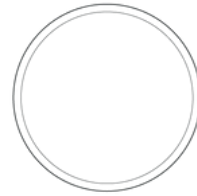


CR2450
Battery

Battery
Holder


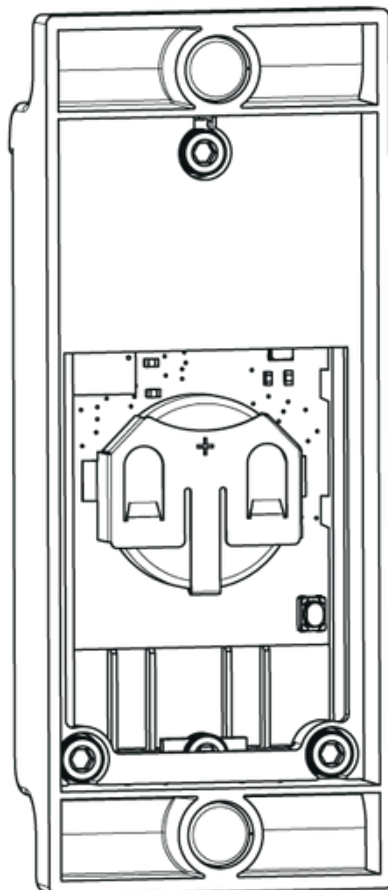


Battery Installed
in battery Holder.

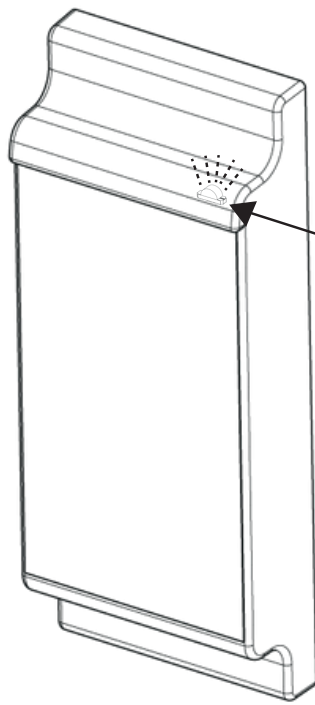


LED will start glowing,
once the battery is
installed.

B : Button Assignment

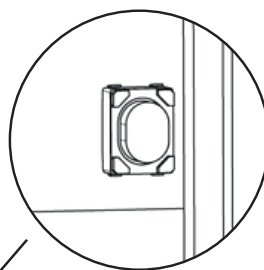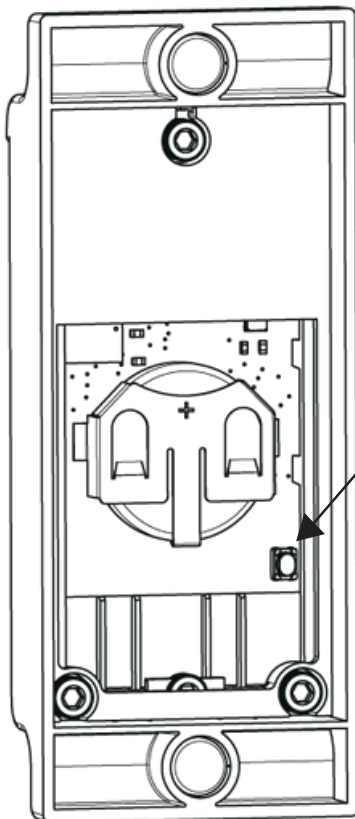


Mode button

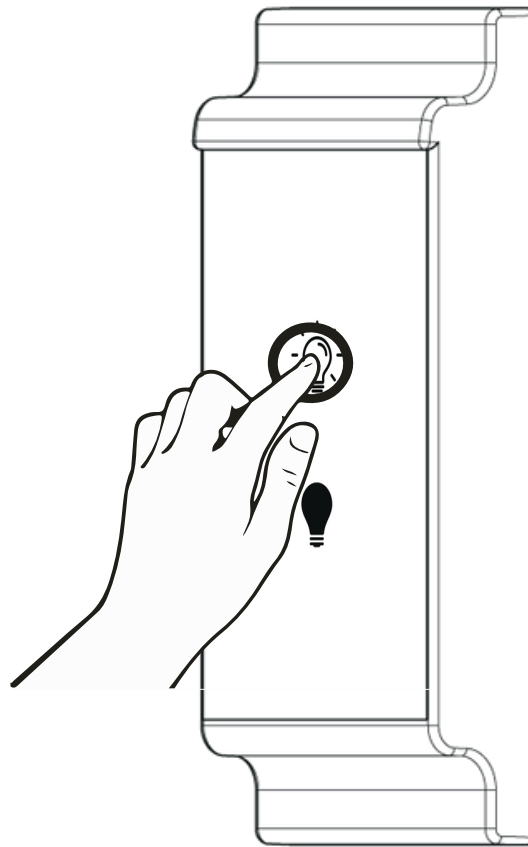

While holding the Mode button, press the locations of the sticker buttons on the touchscreen. Release the Mode button to confirm and apply the button assignments. You can assign up to eight buttons on the touchscreen.

C : Slate Switch Functionality

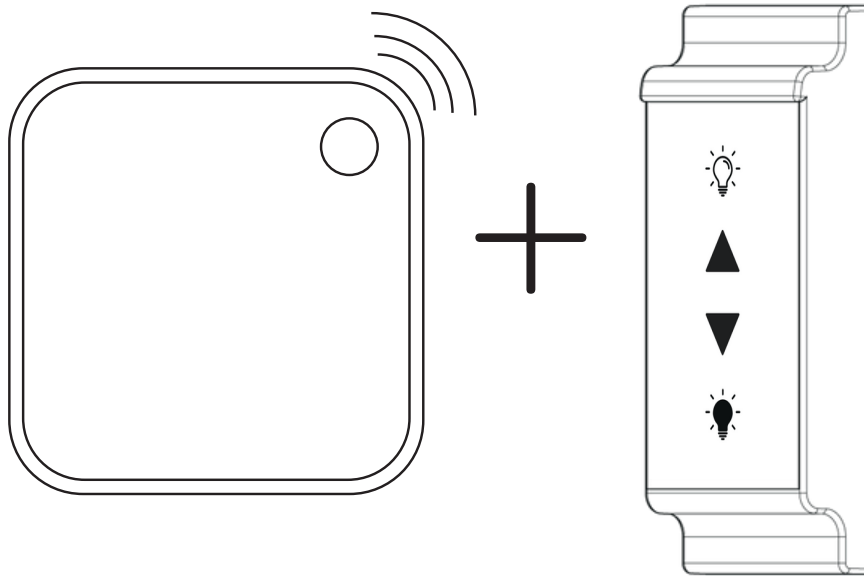

The Slate Switch operates as a Zigbee Sleepy End Device. It requires a Samsung SmartThings Hub or a compatible Zigbee gateway for full functionality. Follow the instructions provided with the SmartThings Hub or compatible gateway to add the Slate Switch to your network. If the Slate Switch is not yet added to a hub, pressing any button on the touchscreen will initiate a search for compatible hubs. During this search, the green LED will blink slowly for approximately 10 seconds.


Once the Slate Switch has been successfully added to a compatible hub, each button supports two actions:


1. Press
2. Hold - Pressing and holding a button for more than 2 seconds, sends a “HOLD” action to the hub.

Device Reset:

Press and hold the Mode button for 10 seconds. At the 10-second mark, the switch will emit a short buzzer sound.

Release the Mode button and press it three times to initiate the device reset. Upon a successful reset, a long buzzer will sound and the green LED will blink.

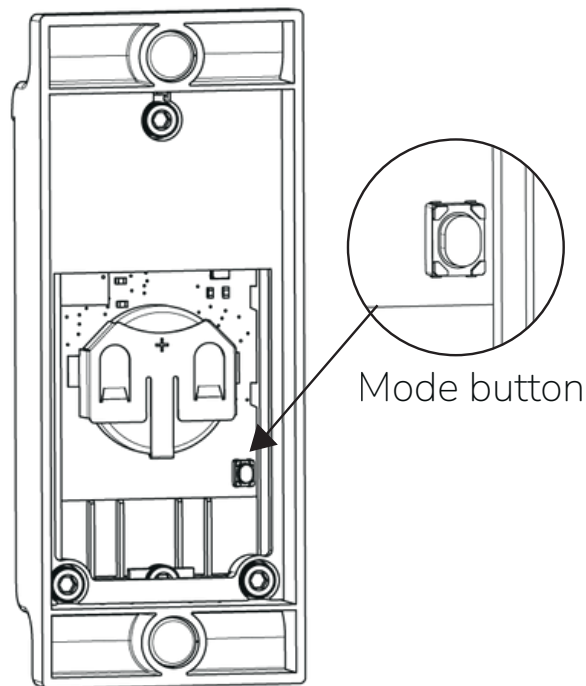

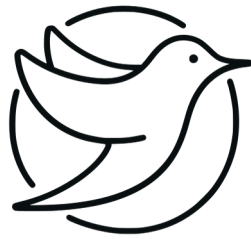

ZUNZUNBEE

Tested to comply with FCC standards
For Indoor use only



Copyright © Things Of A Feather LLC. All rights reserved.
www.zunzunbee.com M25090901